

Firmware 0.5.16 for Hasselblad XCD Lenses

The 0.5.16 release is a maintenance release for all XCD Lenses that solves a few minor bugs.

Bug fixes:

- Solves a problem with the AF mechanism seen on a few XCD120 lenses.
- Minor bug fixes.

Update procedure


Mount the lens on the camera to perform the update. Repeat the process for all XCD lenses.

Make sure that you use a fully charged battery on the camera. A charge level of 50% or more is required. Please note that the update procedure normally takes up to 1 minute.

Note: It is not allowed to have the USB cable inserted during the update process.

Note: Once the update is completed you must remove and reinsert the battery.

Copy the downloaded file (X-Lens_v0_5_16.cim) to the SD card and insert it into the camera. Then follow the procedure below:

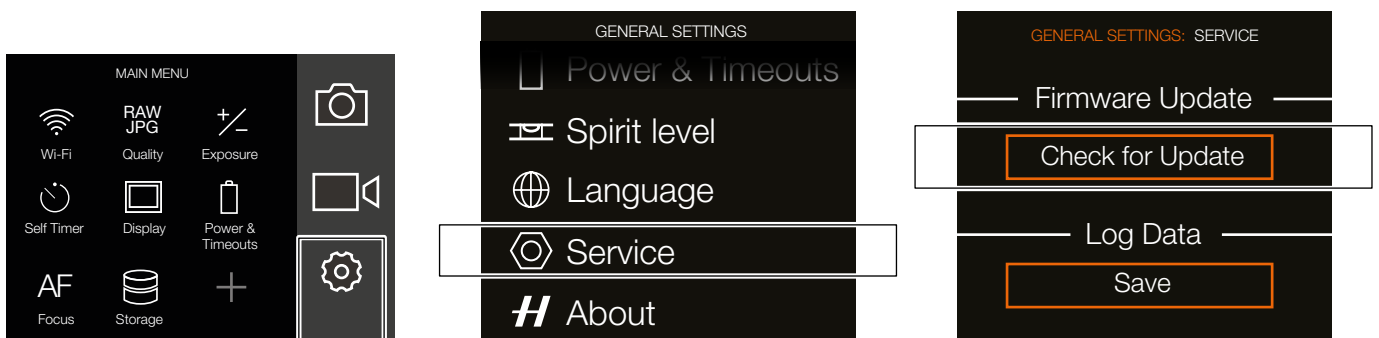

The image shows three sequential screenshots of the camera's settings menu. The first screenshot shows the 'MAIN MENU' with various options like Wi-Fi, RAW JPG, Exposure, Self Timer, Display, Power & Timeouts, AF, Storage, and a gear icon for 'Settings'. The second screenshot shows the 'GENERAL SETTINGS' menu with options like Power & Timeouts, Spirit level, Language, Service, and About. The third screenshot shows the 'GENERAL SETTINGS: SERVICE' menu with options like Firmware Update, Check for Update, Log Data, and Save. Each screenshot has a white box highlighting the specific option to be selected.

1: Select the “Settings Menu” from the main menu.

2: Select “Service”

3: Click “Check for update” and select the file “X-Lens_v0_5_16.cim” from the list. Finally click “Upgrade”.

March 06, 2018 / The Hasselblad Team