

English

User's Guide

Imacon Flextight 848

© 2002 Imacon A/S. All rights reserved.

Imacon Flextight 848 User's Guide, Part No 70030013, revision B.

The information in this manual is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by Imacon A/S.

Imacon A/S assumes no responsibility or liability for any errors or inaccuracies that may appear in this manual.

Imacon A/S assumes no responsibility or liability for loss or damage incurred during or as a result of using Imacon software or products.

Imacon, FlexColor and Flextight are trademarks of Imacon A/S. Adobe and Adobe Photoshop are trademarks of Adobe Systems, Inc. Macintosh, Mac OS, FireWire and ColorSync are registered trademarks of Apple Computer, Inc.

Printed in Denmark.

Table of Contents

Hardware Reference - Flextight 848	5
Warnings and Restrictions	6
System Requirements	7
IBM PC-Compatibles	7
Macintosh	7
Front Panel	8
Back Panel & Connectors	9
Cut-Away View	10
Setting up the Scanner	11
Environmental Requirements	11
Electrical Requirements	11
Installation Procedure, FireWire Interface	12
Installation Procedure, SCSI Interface	12
Operating Instructions	15
Resolutions	19
True Resolutions	19
Calibrating the Scanner	20
Focus Calibration	21
White Calibration for Reflectives	22
The Light Tubes	25
General	25
Replacing the Light Tubes	25
Cleaning the External Surface of the Scanner	27
Disposal	27
Technical Specifications	28
FCC Notice	29
CE - Declaration of conformity	30

Hardware Reference - Flextight 848

This manual provides important information about using your Flextight 848 scanner.

Topics include:

- Important warnings and restrictions
- System requirements
- Diagrams of the front panel, rear panel, and internal structure of the Flextight 848 scanner
- Installation instructions
- Environmental requirements
- Electrical requirements
- Operating instructions
- Special considerations for scanning 35mm originals
- Calibration instructions
- Maintenance advice
- Disposal instructions
- Technical specifications
- Declarations of FCC and CE regulation conformity

Warnings and Restrictions

- Read all of the included documentation before attempting to install and use the scanner.
- Do not touch the originals and/or the original holder while scanning.
- Do not start scanning or previewing until an original holder with an original has been mounted.
- The original holder is only to be mounted or removed when the drum is in the load position.
- When you turn on the scanner, the drum will roll to the load position, if it is not there already. Do not touch the scanner while the drum is rotating.
- Do not place your fingers or any other object into the scanner while it is connected to power.
- Before servicing or opening the scanner, the power supply must be disconnected from the mains (unplugged). It is not sufficient simply to press the on/off button.
- Install the scanner in a location where children can not get to it. It contains small openings and moving parts that can cause injury.

System Requirements

IBM PC-Compatibles

- Minimum 233 MHz processor.
- Windows 95/98, NT4, 2000, ME or XP.
- Windows 98, 2000, ME or XP is required for scanning to CMYK and color management (ICC profile) support.
- Min. 64 MB system RAM.
- Screen resolution of 800 x 600 pixels with true colors (24 bits).
- Mouse or other pointing device.
- FireWire interface
or
SCSI Interface (with Adaptec EZ-SCSI version 4 or later).
- Minimum available hard disk space of 200 MB.

Macintosh

- Minimum Power PC processor.
- Mac OS 9.0 or higher.
- Min. 64 MB system RAM.
- Screen resolution of 800 x 600 pixels with true colors (24 bits).
- FireWire interface
or
SCSI interface.
- Minimum available hard disk space of 200 MB.

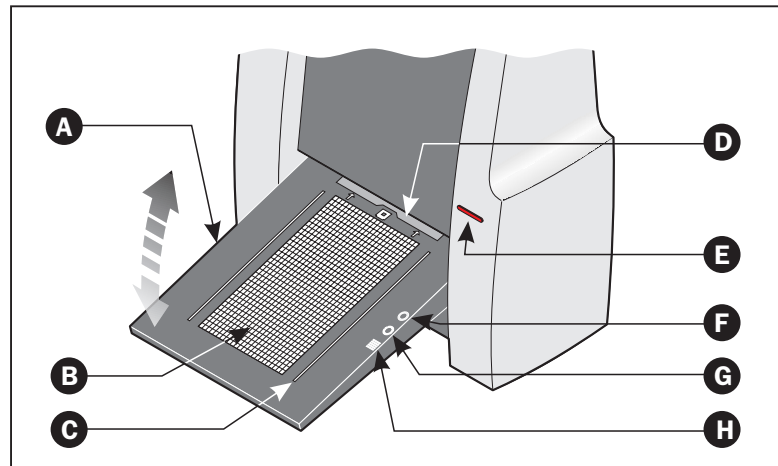
Front Panel

Figure 1: Front panel features of Flextight 848

- A Feed Table:** must be in lower position for normal scanning. When scanner is not in use you can turn it to upright position flushing with the scanner front to protect it from dust etc. Adjust to horizontal position when using the 35 mm slide mount holder (see page 15).
- B Light Table:** for viewing originals. The grid helps you to align your transparent originals.
- C Transparency Holder Guide:** all transparency holders fit between two rails to keep them straight.
- D Original Holder Clasp:** all original holders slide into a slot here and are held in place by a magnetic clasp.
- E Power Switch:** press here to turn the unit on/off.
- F Power Indicator (Green):** Remains lit when ready to scan. Flashes when first installed to indicate that firmware must be loaded (it will be loaded automatically when you run **FlexColor**).
- G Motor Drive Indicator (Yellow):** lights when the scanner is repositioning the optics to scan in a new format or when drum is repositioning.
- H Scan Indicator (Red):** lights when scanning. Do not touch the scanner while this indicator is lit. If the light is flashing when not scanning, then an error has occurred - please contact your Flextight dealer for assistance.

Back Panel & Connectors

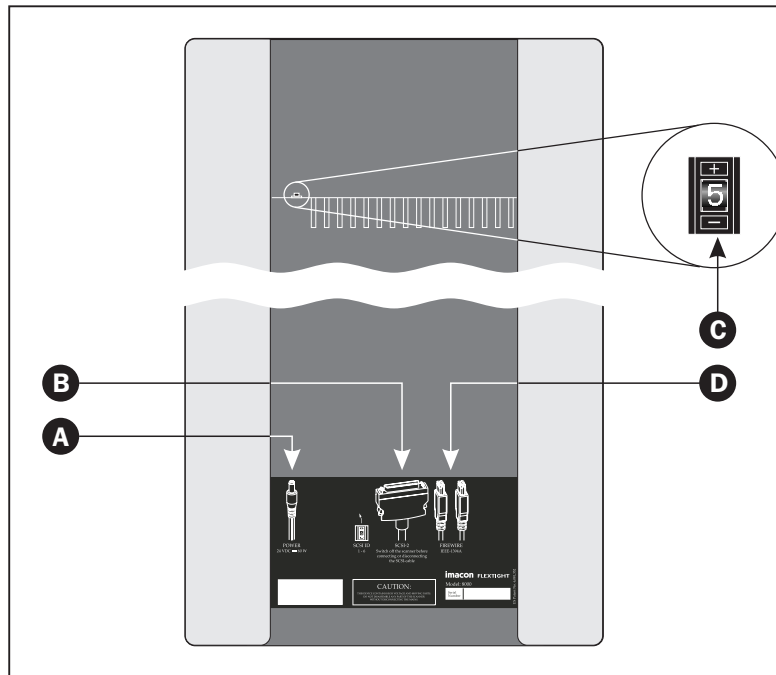


Figure 2: Back panel features of Flextight 848

- A Power Cable Socket:** plug the power cable into this socket.
- B SCSI Port:** plug a SCSI cable here and connect it to the previous SCSI-device in your SCSI-chain or to your computer if no other devices are connected.
NOTE! The scanner must always be connected as the last device in a SCSI-chain as the scanner's SCSI interface has an internal active terminator (see page).
- C SCSI Address Selector:** assign an address number using the + and - buttons. Use only 1, 2, 3, 4, 5, or 6. Do not use 0, 7, 8, or 9.
- D FireWire Interface Sockets:** plug a FireWire cable (max. 6 m) here and connect it to your computer. You can use the second plug to connect another device (hard disk, printer etc.) to the FireWire chain.

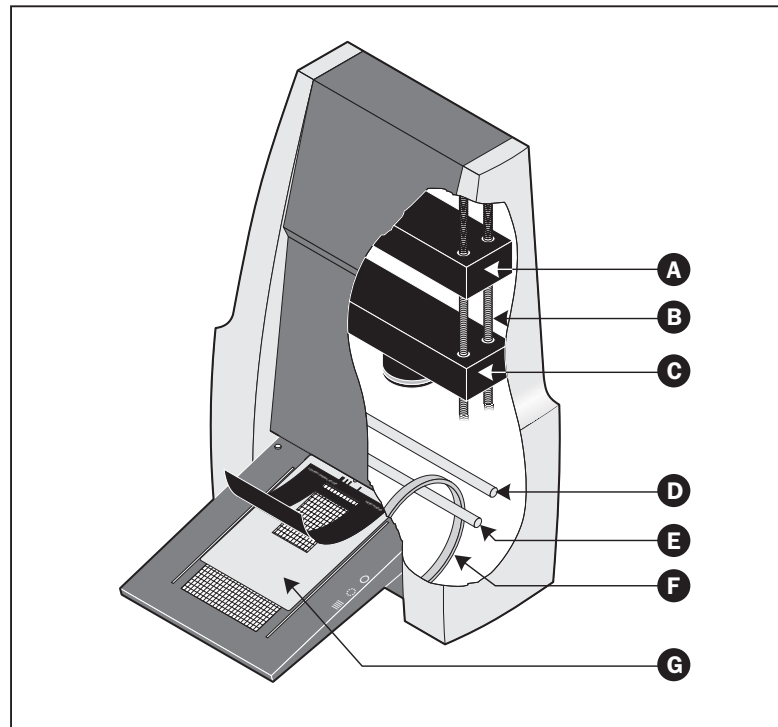
Cut-Away View

Figure 3: Cut-away view of Flextight 848

- A CCD Housing:** this movable platform contains the light sensor and holds the optics.
- B Positioning Lead Screws:** for positioning of the CCD housing and optics housing for the appropriate resolution and original size.
- C Optics Housing:** focuses the image of the original on the CCD.
- D Upper Light Source:** illuminates reflective originals.
- E Lower Light Source:** illuminates transparent originals.
- F Drum:** rotates the original into the scanner and steps it past the CCD line of focus.
- G Original Holder:** a transparency holder is shown mounted and with the top layer held open.

Setting up the Scanner

Environmental Requirements

Set up the scanner in a location that fulfils the following requirements:

- Keep the scanner away from sources of heat, such as direct sunlight or a radiator. Warm temperatures will degrade the quality of your scans - for best results, work in a cool environment.
- The scanner must be operated away from sources of strong electromagnetic interference. Although the scanner complies with all regulations governing electromagnetic immunity and Imacon has taken every reasonable step to make the unit immune to electromagnetic interference, it is still a precision electronic device so strong radio waves can interfere with your scans.
- The surface on which the scanner is placed must be stable and free from vibrations. If the scanner is shaken or moved while scanning, your results may be affected.
- If the scanner has been in a colder environment (e.g. outside or in storage) just before you set it up in a warmer room, then wait about two hours before using it - otherwise, condensation may form, which will prevent the scanner from operating correctly.
- Avoid using the scanner in areas where there is a high level of dust.

Electrical Requirements

The Flextight 848 power supply requires a mains voltage of between 100 and 240 V AC at a frequency of 50 to 60 Hz. This is within the normal wall-socket power standards of most countries. Do not attempt to use Flextight 848 with any power source outside the specified range.

The scanner and all devices attached to the scanner (computer, monitor, FireWire or SCSI devices, etc.) must be grounded (i.e. use a three-point electrical connection).

Note that the power supply may emit a low hissing sound when plugged in but not connected to the scanner. This is normal and will not damage the power supply or scanner.

Installation Procedure, FireWire Interface

1. Place the scanner on a table near your computer with the front facing away from you. Make sure that the location you choose meets all environmental - and electrical requirements as described on page 11.
2. When using a FireWire interface connection, it is not necessary to switch of your computer and other connected units. Connect a FireWire cable from one of the FireWire connectors on your scanner (see Back Panel & Connectors on page 9) to either the computer's FireWire connector or to a free FireWire connector on any other FireWire device already connected to your computer.
3. Connect the round connector from your power supply to the round power supply socket on the back of the scanner.
4. **IMPORTANT:** Make sure that the wall socket you are planning to use meets the electrical requirements outlined earlier. Plug the Flextight 848 power supply into a wall socket. Note that the power supply may emit a low buzzing sound when plugged in. This is normal and will not damage the power supply or scanner.
5. Turn the scanner around so that the front is facing you.
6. Your system is assembled. Turn on your computer and install the **FlexColor** image scanning software.

Installation Procedure, SCSI Interface

1. Place the scanner on a table near your computer with the front facing away from you. Make sure that the location you choose meets all environmental - and electrical requirements as described on page 11.
2. **IMPORTANT:** Make sure that your scanner, your computer and all devices connected to the SCSI chain are switched off. You can damage your equipment if you make or break SCSI connections to or from units that are turned on.
3. Connect a SCSI cable from the scanner's SCSI connector (see "Back Panel & Connectors" on page 9) to the free SCSI-connector on the previous device in your SCSI-chain (you may have to remove a terminator) or to the SCSI connector on your computer if no other devices are connected.

IMPORTANT: The scanner must always be connected as the last device in a SCSI-chain as the scanner's SCSI interface has an internal active terminator.

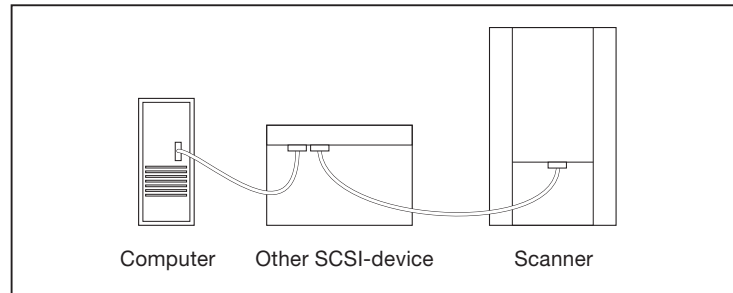


Figure 4: SCSI chain

4. **IMPORTANT:** On the back of the scanner is a small switch, which is used for setting the SCSI address for the scanner (see Figure 5). Make sure that each device in your SCSI chain has been assigned a different SCSI address. If necessary, use the + and - buttons to select a new address for the scanner. Use only 1, 2, 3, 4, 5, or 6. Do not use 0, 7, 8, or 9.



Figure 5: SCSI address selector switch

5. Connect the round connector from your power supply to the round power supply socket on the back of the scanner.
6. **IMPORTANT:** Make sure that the wall socket you are planning to use meets the electrical requirements outlined above. Plug the Flextight 848 power supply into a wall socket. Note that the power supply may emit a low buzzing sound when plugged in. This is normal and will not damage the power supply or scanner.
7. Turn the scanner around so that the front is facing you.
8. Your system is assembled. Turn on your computer and install the FlexColor image scanning software.

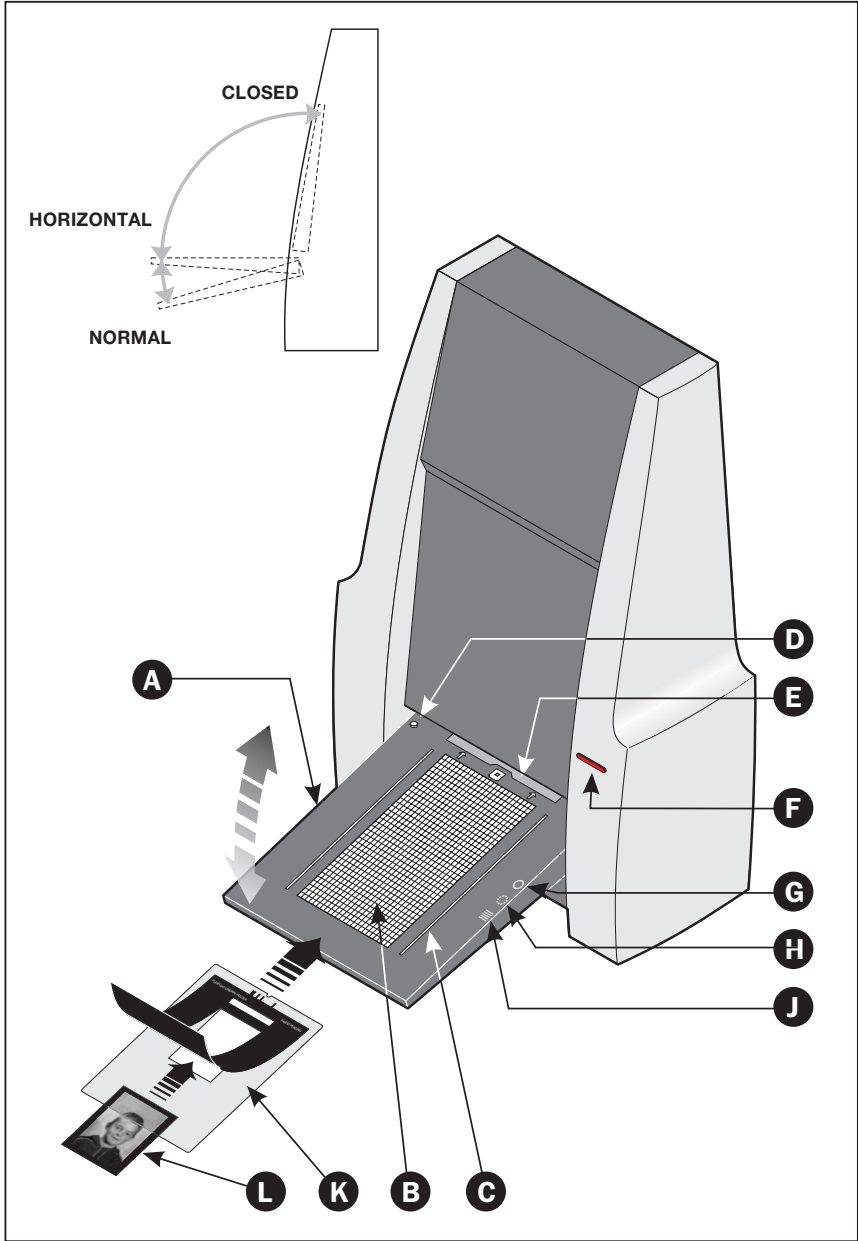


Figure 6: Operating the Flextight 848 scanner

Operating Instructions

(See Figure 6 opposite).

1. It is assumed that the scanner and **FlexColor** software have been properly installed.
2. **IMPORTANT:** If you are using a SCSI interface connection it is important that you turn on the scanner (and all other SCSI devices if any) before you turn on the computer. Otherwise the computer will not detect the unit(s).
3. If not already done, turn the feed table (**A**) to normal position.
4. Press the red power button (**F**) on the front of the scanner to switch it on. The green light (**G**) starts flashing. This means that no firmware has been downloaded yet. It will be downloaded automatically later when you first run the **FlexColor** program.
5. Turn on your computer and start the **FlexColor** program. The green light (**G**) will stop flashing indicating that firmware has been downloaded to the scanner.
6. Select the original holder (**K**) that matches your original:
 - For transparencies, choose one of the holders that has a square hole in it. The original must completely fill the hole with no edges showing. Also, no edges of the original must extend past the outer edges of the holder.
The feed table (**A**) must be in normal position.
 - For reflectives, select the large A4/letter-size holder with the clear plastic layer.
The feed table (**A**) must be in normal position.
 - For 35 mm slide frames use the optional 35 mm slide mount holder.
The feed table (**A**) must be adjusted to horizontal position. This is obtained by lifting the table slightly upwards while pushing it gently into the scanner.
Please note that when scanning 35 mm slide frames in the 35 mm slide mount holder it is recommended to use autofocus. See the *FlexColor Software Reference* for details.

continues...

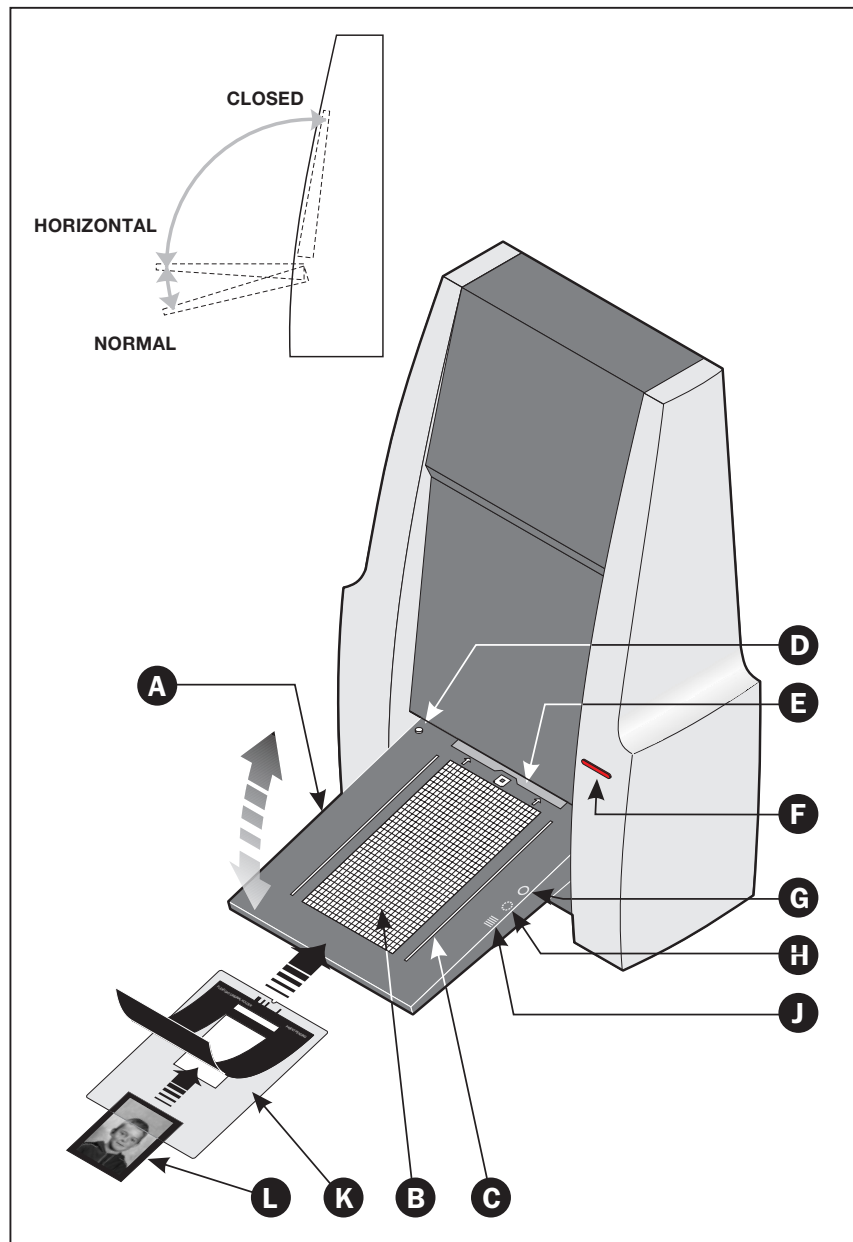


Figure 6: Operating the Flextight 848 scanner

...continued

NOTE! Each original holder has its own unique identification code (a combination of small rectangular holes at the holder's leading edge). These codes, combined with the scanner's ability to detect the feed table position, ensure that the scanner will not operate unless the feed table position matches the selected original holder.

7. Place the original holder (**K**) with the slotted tab facing into the scanner. For transparencies, the flexible magnetic layer must face upwards. For reflectives, the clear plastic sheet must face upwards. Make sure that the original holder fits between the appropriate guides (**C**) or (**D**) on both sides of the light table.
8. Slide the holder gently into the slot (**E**) at the top of the feed table. It will slip about ½ cm (1/4 inch) into it. Do not press too hard. It slips in very easily and is held in place by a magnetic clasp. To remove the holder, simply pull it gently backwards.
9. Lift the top layer of the original holder and place your original (**L**) as follows:
 - For transparencies, place your original with the emulsion side down. The original must completely fill the hole with no edges showing and with a minimum overlap of 2mm along each edge. Also, no edges of the original must extend past the outer edges of the holder. Use the grid on the light table (**B**) to help line up the image.
 - For reflectives, make sure that no part of the original extends past the edge of the holder. Use the dotted lines printed on the holder to line up the image. Handle the clear plastic layer only by the edges to avoid fingerprints. Curl the plastic layer back and slip the front edge into Flextight's foil holder.

continues...

...continued

10. Lay the top layer of the holder down flat over the original.
 - For transparency holders, the top layer is magnetic, which will hold the original fast.
 - For the reflective holder, note the four metal pegs (the top two are shown as **A** and **C** in Figure 7 below); make sure that the clear plastic sheet is pressed all the way down over all four pegs. Note also the two curved tabs at the top of the holder (**B** in the figure below); the clear sheet must slip under each of these tabs, as shown.

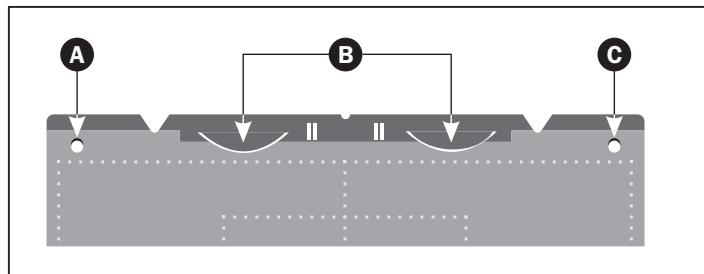


Figure 7: Reflective holder, top

11. Go to your computer and follow the directions given in the **FlexColor** software manual to take a preview, make settings, and take the final scan.

Resolutions

True Resolutions

The table below shows the max. resolutions (in dpi) available with each of the original holders when scanning in **True Resolutions** mode.

Original	Max. resolution (DPI) at full scanning width.
35 mm Portrait	8000
35 mm Landscape	5000
45 x 60 mm Portrait	4000
60 x 60 - 60 x 70 mm	3200
4" x 5" Portrait	2040
13 x 18 Portrait	1600
A4 Portrait	960

Table 1: True Resolutions

Calibrating the Scanner

The scanner requires two types of calibration:

- **Focus calibration** adjusts the positioning of the scanners optics for each zoom level. If your scans are coming out unfocused or at slightly the wrong size, then you may need to make a new focus calibration to adjust the zoom mechanism. The focus calibration is stored in the scanners flash PROM, so it is preserved when you move the scanner to a new computer. See "Focus Calibration" on page 21 for more information.
- **White calibration** is only required for reflective scans (it is done automatically for transparencies). During calibration, the scanner scans a white target to establish the white point along the full length of the scanners CCD. The results of the white calibration scan are saved on your computers hard disk, so you must make a new white calibration if you move the scanner to a new computer. See "White Calibration for Reflectives" on page 22 for more information.


Both of the calibration procedures are simple and are initiated from the **FlexColor** program.

Focus Calibration


The Flextight 848 scanner uses an adjustable zoom and focus mechanism to optimize its scanning resolution for each of the original formats it can handle. If you suspect your scans are not as sharp as they should be, then you may need to calibrate your scanner. Note that you must not calibrate the scanner every day. It is intended that the scanner is calibrated not more than once every three months. In most cases, this procedure will never be necessary.

Use procedure below to make Focus Calibration:

1. Locate the "Focus sheet" that came with your scanner. It is a 8 x 9 cm (3" x 3.5") square of transparent film with a black image on it.

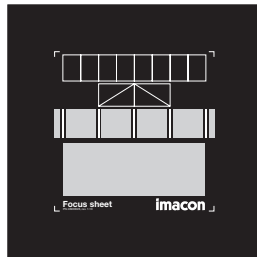

2. Load the sheet into the 6 x 6 original holder with the lines pointing towards the scanner (vertically). Place the sheet as straight as possible. Use the scanners light table grid and the corners marked on the sheet to help align it.
3. Select **Focus Calibration** from the **Maintenance** menu.

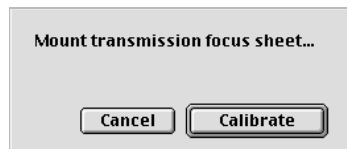

4. Click on the **Calibrate** button, and the focus calibration starts.
5. When the focus calibration is finalized, the focus calibration window closes again.


Your scanner is now calibrated for all resolutions and for both transparent and reflective originals.

White Calibration for Reflectives

The Flextight scanner uses a white reference to make sure that all elements in the scanners CCD react consistently to light brightnesses. The first time you make a reflective scan, a window will appear reminding you to make a white calibration scan. Thereafter, the calibration will be stored on your computers hard disk. As the scanner ages, the properties of the light tubes may change slightly. Therefore, you must redo the white calibration every six months or so and immediately after changing the light tubes. Note also that because the white calibration information is stored on your computers hard disk, you must make a white calibration each time you move the scanner to a new computer.

Use procedure below to make White Calibration:

1. Find the white calibration sheet that came with your scanner. It is a square white piece of paper (219 x 219 mm (8.6" x 8.6")). If you have lost the white calibration sheet, then you can use a flat (non-textured), perfectly white piece of paper of the same dimensions.
2. Your scanner came with several clear plastic layers for the reflective original holder. If you have used the reflective holder before, make sure that there are no finger prints or other marks on the plastic layer. Replace the layer with a new one if necessary.
3. Align the top edge of the sheet with the dotted line near the top of the original holder (see Figure 8 opposite). Align each side of the target with the edges of the original holder.
4. Select **White Calibration** from the **Maintenance** window. The **External White Calibration** window appears.

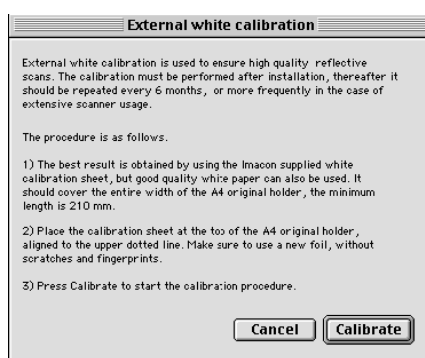

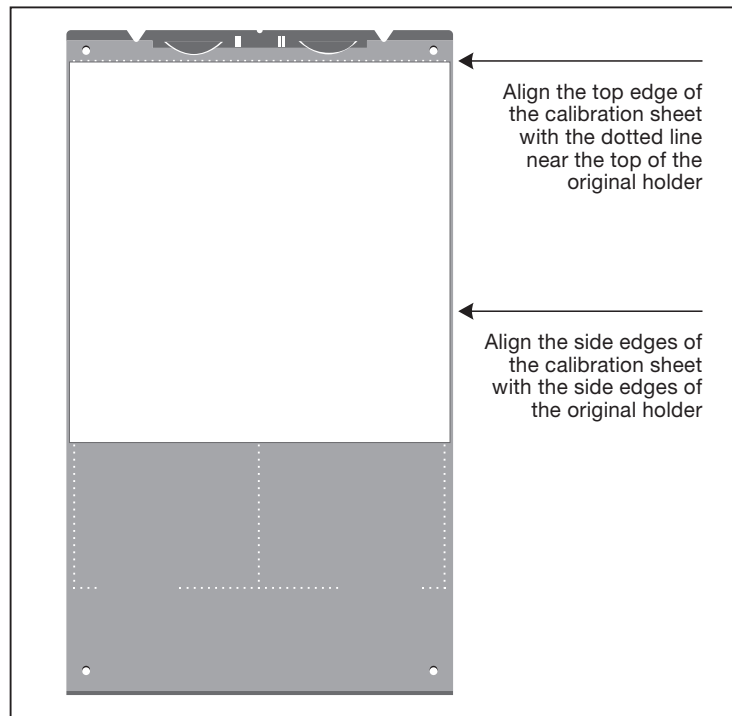


Figure 8: Positioning the white calibration sheet on the reflective holder

5. Click on **Calibrate**. The scanner will take several scans of the white target. The process will take about eight minutes.

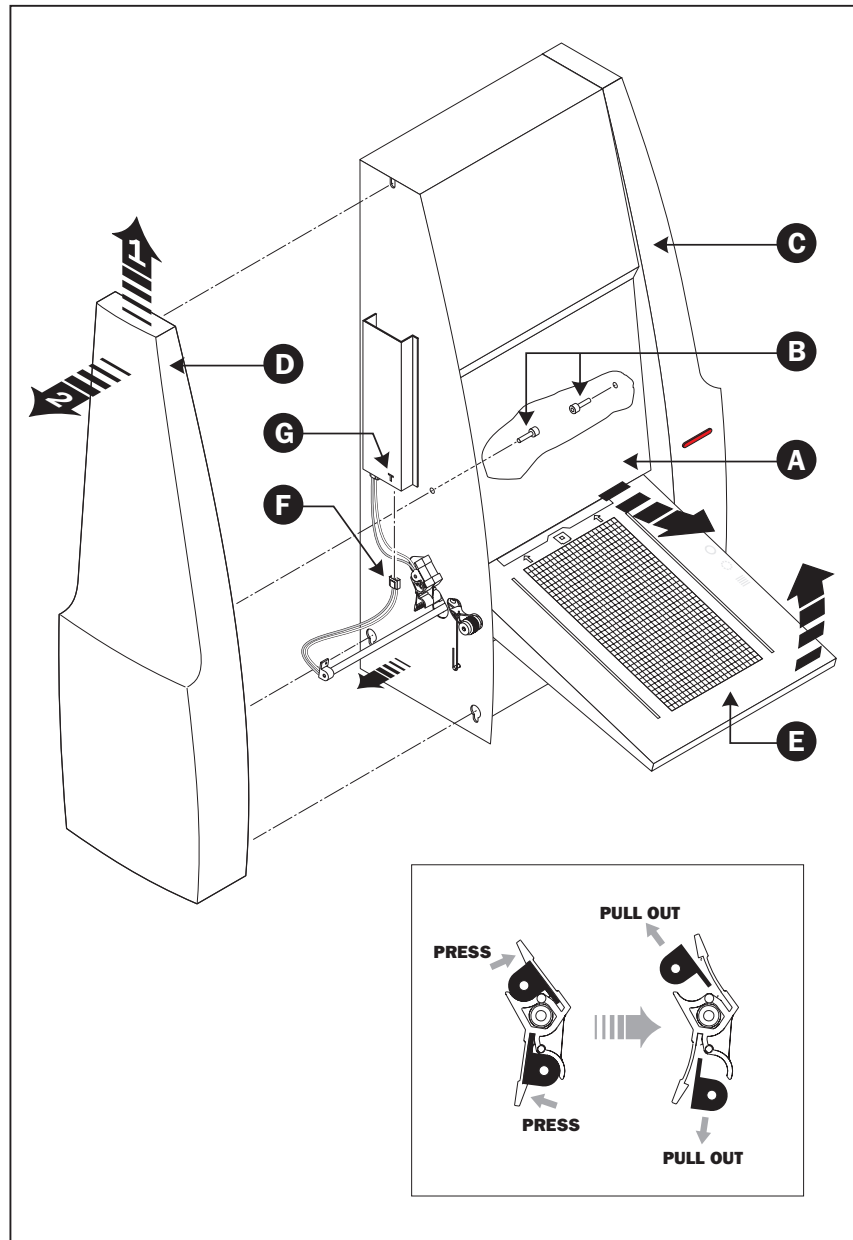


Figure 9: Replacing the Light Tubes

The Light Tubes

General

The Flextight 848 contains two light tubes: one for illuminating reflective originals from above, the other for shining light through transparencies from below.

Replacing the Light Tubes

If your scans are suddenly coming out black (or all white if you are scanning negatives), then one of your light tubes may be defective. Make a preview using both types of scans (transparent and reflective) to find out which tube is affected.

- If transparencies are not working, then the bottom tube may be burned out.
- If reflectives are not working, then the top tube may be burned out.

Follow procedure below to replace a tube:

(See Figure 9 opposite).

1. Get the appropriate replacement lamp (ask your Flextight dealer).
2. Turn off and unplug the scanner from the primary power supply.
3. **IMPORTANT:** Let the light tubes cool down for app. 10 minutes before proceeding.
3. Remove the front panel (A) by pulling it outwards at the bottom and lift it off.
4. Remove the two black allen screws (B) (one in each side) using a 3 mm allen key. Do not remove any other screws.
5. Remove the two side panels (C) and (D) by lifting them slightly upwards and then outwards.
NOTE! It may require a firm push upwards to release the panels.
6. Turn the feed table (E) to upright position.
7. Locate the tube to be replaced and dismount the plug (F).

continues...

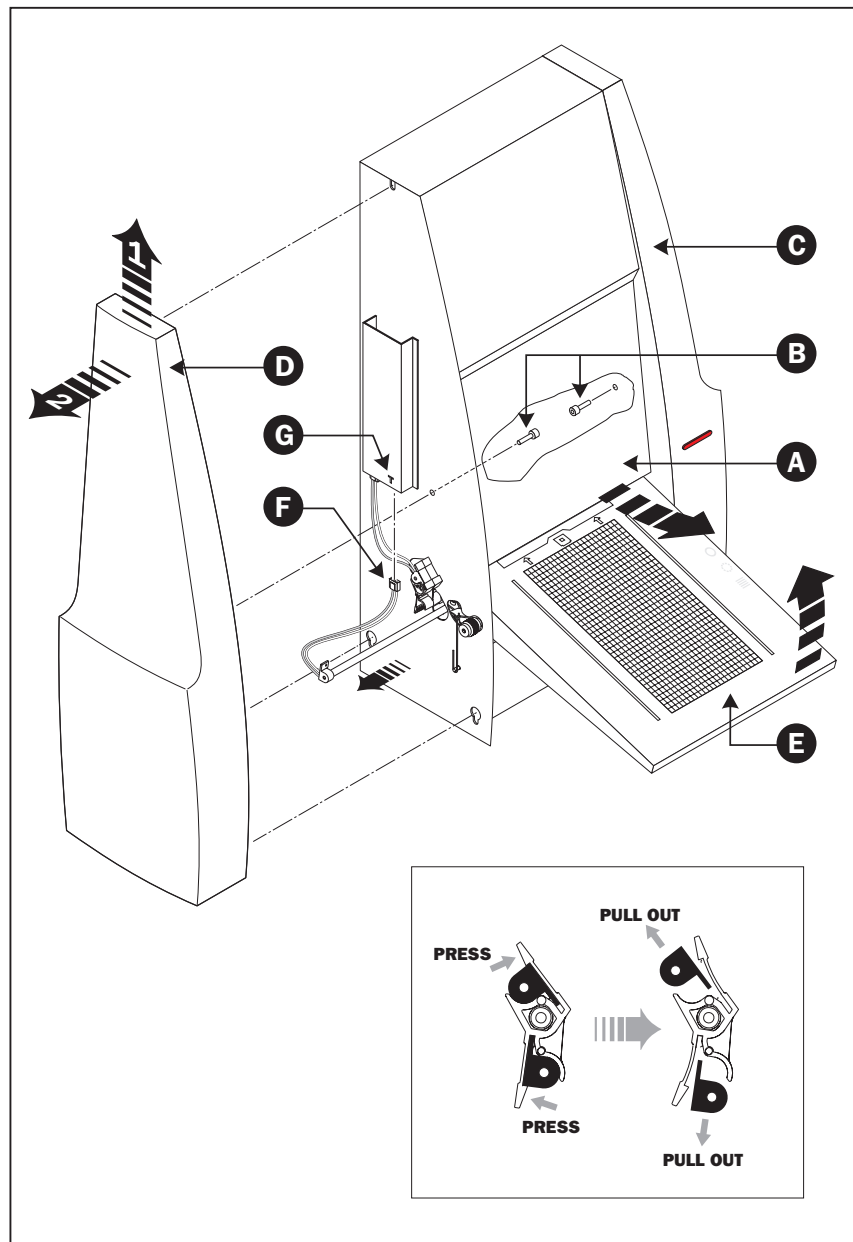


Figure 9: Replacing the Light Tubes

...continued

8. Remove the defective tube:
 - Press the flaps backwards to release the tube.
 - Pull the tube gently out of the holders and then sideways out of the scanner.
9. Insert the replacement tube and mount it into the holders making sure that it is properly held in place by the flaps.
10. Connect the plug (F).
11. **IMPORTANT:** The "T" on the lamp board cover (G) indicates the socket for the transparencies tube.
12. Lower the feed table (E).
13. Mount the side panels (C) and (D), the screws (B) and the front panel (A) following the reverse of the procedure used when removing them.
NOTE! When mounting the front panel (A) make sure to give it a firm push at the bottom to click it properly into position.
14. Turn on the scanner and check function of the new tube.

Cleaning the External Surface of the Scanner

If the external surface of the scanner becomes dirty, then clean it with a damp cloth. Be careful not to get any moisture inside the scanner or on any of the connectors. Do not use alcohol or other solvents.

Disposal

If you need to dispose of the scanner, it must be delivered to an authorized waste plant for electronics equipment.

Technical Specifications

Power Connector:

24 VDC $\overline{=}$ 60W



Power Consumption

Max. 60 W during operation

Power Requirements

100-240V AC, 1.3A, 50-60Hz

Interface to Computer

FireWire (IEEE 1394)

SCSI-2 (ANSI X3.131)

Front Panel

One multifunction switch (on/off switch)

Status indicator LED's

Drum Force

1kg (2.2lbs)

Operating Environment

Operating Temperature: 10 - 35°C (50 - 95°F)

Recommended Working Temperature: 10 - 25°C (50 - 77°F)

Humidity: 20 - 80% RH (no condensation)

Storage Environment

Temperature: 0 - 50°C (32 - 122°F)

Relative humidity: 20 - 80% RH (no condensation)

Originals

Transparencies: from 35mm to 4x5 inches, <1mm thick

Reflectives: up to 220 x 310mm (A4 oversize), <1mm thick

Standard 35 mm dias in frames (optional)

Lamp type

Color optimized fluorescent lamp

Dimensions

Height: 645 mm (25.4")

Width: 385 mm (15.2")

Depth: 220 mm (8.7") (feed table closed)

440 mm (17.3") (feed table open)

Weight

17 kg (38 lbs)

FCC Notice

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CE - Declaration of conformity

imacon	
A GLUNZ & JENSEN COMPANY	
 Declaration of conformity	
Application of Council Directives:.....	89/336/EEC amended by 92/31/EEC, 93/68/EEC, 93/13/EEC, 73/23/EEC amended by 93/68/EEC.
Standards to which Conformity is declared:	EN50081-2, EN50082-2 and EN 60950.
Manufacturer:	Imacon A/S Hejrevej 30 DK-2400 Copenhagen NV/ Denmark
Type of Equipment:.....	Desktop CCD scanner
Model name:	Flextight model 848
The undersigned, hereby declare that the equipment specified above conforms to the above Directives and Standards.	
Place.....	Copenhagen NV
Date.....	December 1 st , 2001
Full name	Christian Poulsen
Position	Managing Director
	 Signature
	imacon Hejrevej 26 DK-2400 Copenhagen NV Denmark